
Simply Color Lab

Acrylic/Metal Print Hanging Instructions Using Aluminum Standoffs

(Standoffs, Screw(s) and Anchor(s) included): Materials / Tools Needed:

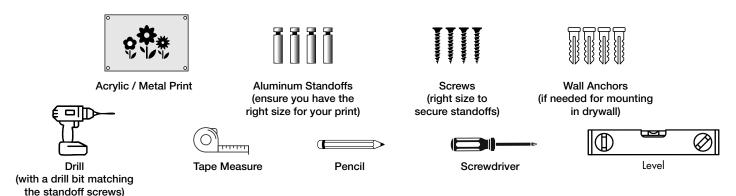


STEP 1: CHOOSE THE LOCATION

• Decide where you want to hang your print. Consider the lighting and surrounding decor.


STEP 2: MEASURE AND MARK

 Use the measuring tape to determine the height at which you want to hang the print.

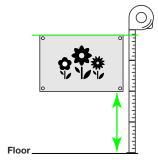

STEP 3: MARK STANDOFF POSITONS

 Hold the print in position and check it with the level. Adjust if necessary.



 Hold the print in position and use a pencil to mark the center of the holes.



STEP 4: DRILL PILOT HOLES / INSTALL ANCHORS

 Use the drill to make pilot holes at the center of the marked locations.




 If your print is heavy, or you're mounting it on drywall, insert wall anchors into the drilled holes.




STEP 5: INSTALL STANDOFFS

 Use your screwdriver to install the base of the standoffs into the holes or wall anchors




STEP 6: HANG THE PRINT

 Positon a plastic washer behind and in front of each hole in the print.

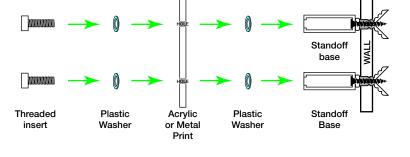

 Put the threaded inserts through the holes and plastic washers and screw them into the bases loosely until all the inserts are in.

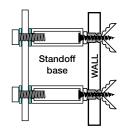

• Tighten the inserts.

FINAL TIPS:

• SAFETY FIRST -

If your print is large or heavy, consider having someone assist you.

DOUBLE CHECK MEASUREMENTS -

Take your time measuring to ensure the standoffs are evenly spaced and level.

• CLEANING -

Clean the print with a soft microfiber cloth before and after hanging to ensure it looks its best.

Now you're ready to display your beautiful print.

ENJOY YOUR ARTWORK!